Item # 959 801
Model # 6105

USE AND CARE GUIDE

CONTEMPORARY ROUND FLUSH MOUNT IN GLASS WITH BRUSHED NICKEL FINISH WITH BULBS

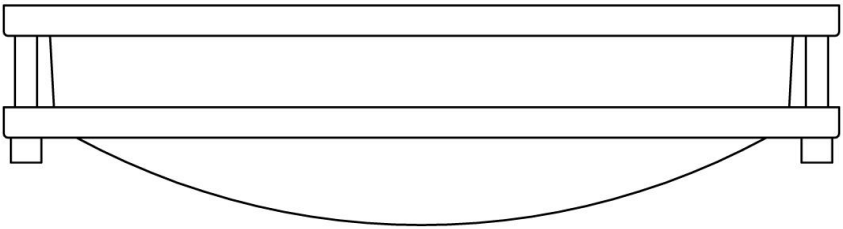

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this (insert product). We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Cover page.....1
Precautions & Warranty.....2
Pre-Installation.....3 - 5
Installation.....6 - 7
Care & Cleaning.....8
Troubleshooting.....8

Precautions

1. Make sure power is turned off to light fixture prior to installation
2. Installation must be performed by a qualified or licensed electrician
3. To prevent electric shock, do not insert any objects through openings or attempt to open the adapter
4. Use safety precautions. Always handle lamp by its base

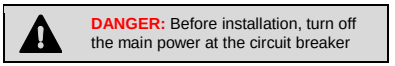

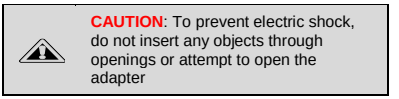

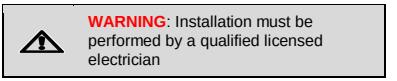

Warranty

We warrant this lighting fixture to be free of manufacturing defects to the original purchaser for two years.

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.hamptonbay.com.

Pre-Installation

PLANNING FOR SUCCESSFUL INSTALLATION

Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS. If you have any non-electrical questions about this fixture, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU (959-801) or UPC (854451003352).

KEEP your receipt and these Instructions for Proof of Purchase.

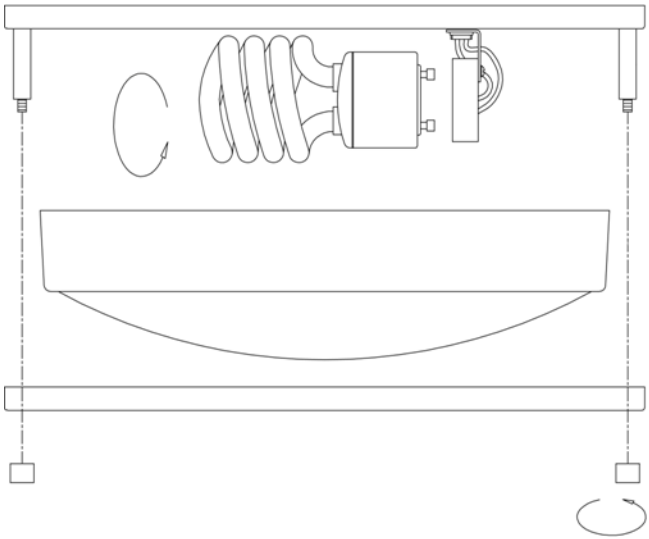

Specifications

Light Base	Glass Globe	Decorative Ring	Decorative Rods	Decorative Nuts	CFL Bulb
11.75 " dia. ½" high	10.5" dia 2.5" high	11.85" dia. ½" high	1.75 "	.85" x .85"	23 Watts Energy Star Rated

Model No.	
Lamp wattage	23w
Voltage	120V
Replacement bulbs	GU24 double pin compact fluorescent

.

Pre-Installation (continued)

TOOLS REQUIRED

Place tools with description in column cell to the right of the tool. Some column width adjustments may be necessary depending on the tool.

Wire Stipper Cutter

Safety goggles

Phillips & Flat head screwdrivers

Electrical Tape

HARDWARE INCLUDED

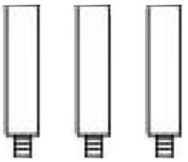

AA Rods (3)

BB Nuts (3)

CC Wire Nuts (3)

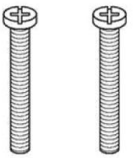

DD Fixture Mounting Screws (2)

NOTE: Hardware not shown to actual size.

Part	Description	Quantity
AA	Decorative mounting rods	3
BB	Decorative nuts	3
CC	Wire Nuts	2
DD	Mounting Screws	2

Pre-Installation (continued)

PACKAGE CONTENTS

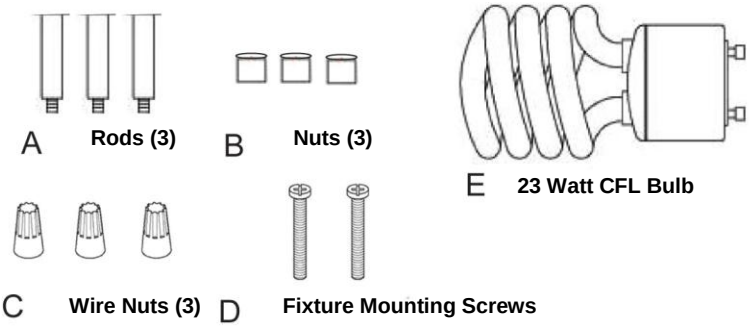

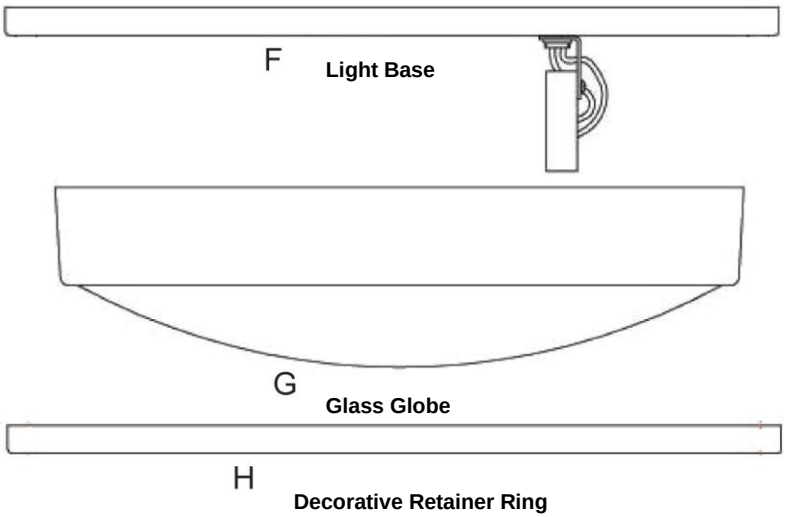

Part	Description
A	Decorative Mounting Rods
B	Decorative Nuts
C	Wire Nuts
D	Fixture Mounting Screws

Part	Description
E	23 Watt CFL Light Bulb
F	Light Bas
G	Glass Globe
H	Decorative Retainer Ring

Installation

WARNING: Turn off power to fixture prior to installation

1. Remove existing light fixture

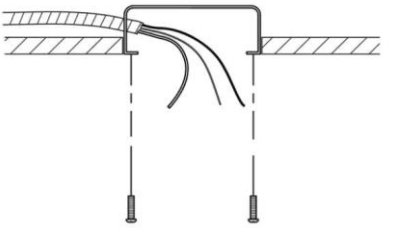

2. Connect wires from light to ceiling box wires.

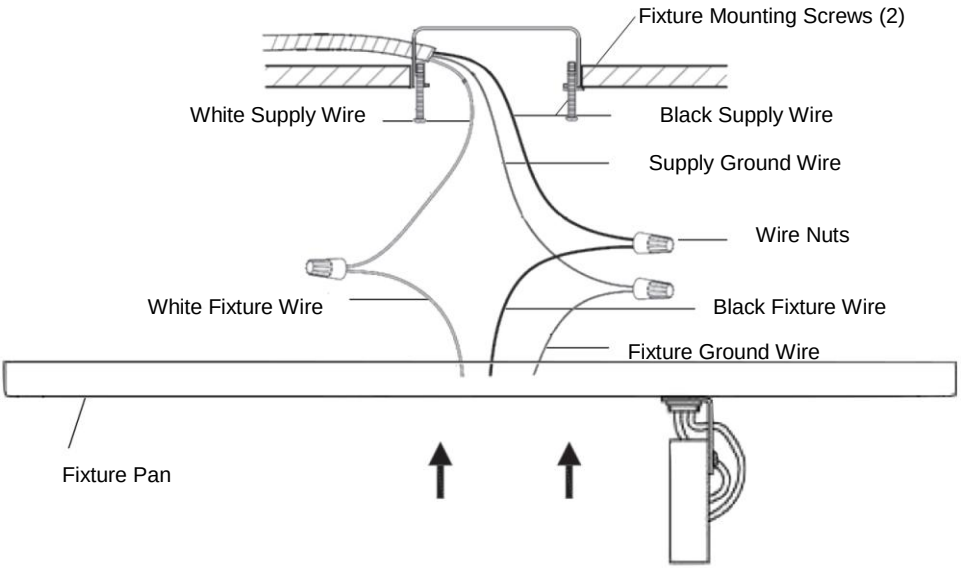

Installation (continued)

3. Insert new mounting screws into ceiling box.
4. Place light base into screws and twist.
5. Tighten screws to secure light base

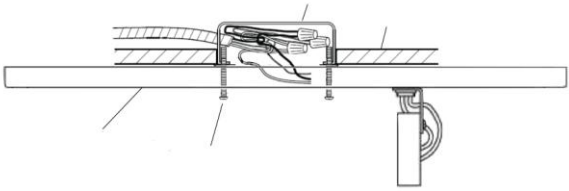

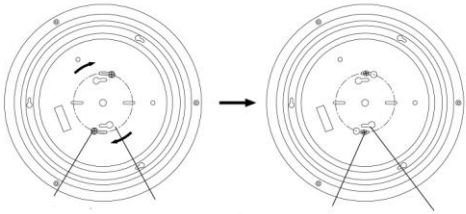

6. Assemble light.

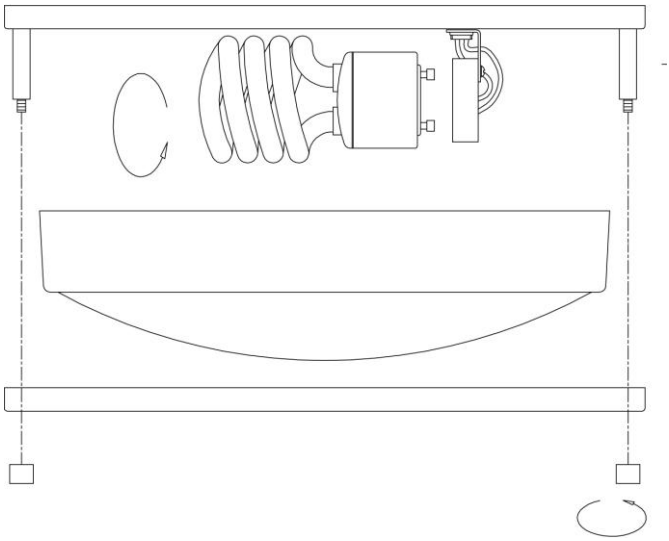

Care and Cleaning

PRODUCT MAINTENANCE

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the glass and surface of the fixture.

2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.

3. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside glass and interior surface of the fixture.

4. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

Troubleshooting

Problem	Solution
Light will not turn on.	Check Light Bulb Make sure power supply is on. Test or replace switch. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Check wire connections.

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

Retain this manual for future use.

X0000000000-A